

Important Safety Information

Retain and follow all product safety and operating instructions. Observe all warnings on the product and in the operating instructions.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the precautions described in this booklet.

General Precautions

Heed service markings: Except as explained elsewhere, do not service any HP product yourself. Opening or removing covers that are marked may expose you to electric shock. Service needed on components inside these compartments should be done by an HP authorized service provider.

Damage requiring service: Unplug the product from the electrical outlet, and refer servicing to an HP authorized service provider under the following conditions:

- Power cord, extension cord, or plug is damaged.
- Liquid spilled or an object fallen into the product.
- Product exposed to rain or water.
- Product dropped or damaged.
- Noticeable signs of overheating.
- Product does not operate normally when you follow the operating instructions.

Avoid hot areas: The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers).

Avoid wet areas: Never use the product in a wet location.

Avoid pushing objects into product: Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

Mounting Accessories: Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

Avoid unstable mounting: Do not use the product on an unstable table, cart, stand, tripod, or bracket. Do not place a monitor heavier than 55 pounds (25 kilograms) on top of a monitor support cover. Instead, place the monitor on a work surface next to the docking base.

Adjust the volume: Turn down the volume before using headphones or other audio devices.

Safety Precautions for Power Cords and Accessories

Use the correct external power source: A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your HP authorized service provider or local power company. For a product that operates from an external

AC adapter or other source, refer to the operating instructions that are included with the product.

Select the correct voltage: Ensure that the voltage select switch is in the correct position for the type of voltage you use (115 VAC or 230 VAC).

Use an approved power cord: If you have not been provided with a power cord for your product, purchase a power cord that is approved for use in your country/region.

The power cord must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product. In addition, the diameter of the wire must be a minimum of 0.75 mm/18AWG and the cord should be between 5 and 6.5 feet (1.5 and 2 meters) long. If you have questions about the type of power cord to use, contact your HP authorized service provider.

Position the power cord carefully: Route the power cord so that it will not be walked on, tripped over, or pinched by items placed upon or against it. Pay particular attention to the plug, electrical outlet, and the point where the power cord exits the product.

Overloading: Do not overload an electrical outlet, power strip, or convenience receptacle. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip input rating.

Observe extension cord ratings: If an extension cord or power strip is used, make sure that the cord or strip is rated for the product and that the total ampere ratings of all products plugged into the extension cord or power strip do not exceed 80% of the extension cord or strip ampere ratings limit.

Using Cables and Power Cords

Plug the product into a grounded (earthed) electrical outlet that is easily accessible at all times.

Do not disable the power cord grounding plug. The grounding plug is an important safety feature.

Disconnect power from the product by unplugging the power cord from the electrical outlet.

Do not pull on cords and cables. When unplugging the cord from an electrical outlet, grasp and pull the cord by the plug.

Do not use appliance converters: Do not attempt to power the product with converter kits sold for appliances.

Cleaning: Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean an LCD screen.